HOLME strength in pellet durability

NHP200

Pellet Durability Tester

- Automatic
- Suitable for Animal Feed & Wood Pellets
- Fast and Simple Operation
- Fines Removed During Test
- Repeatable Accuracy of ± 0.1%
- Results displayed on LCD Touch Screen



Operation:

Automatic

Pellets Tested:

Feed & Wood

Sample Amount Required:

95g-105g

Function:

Lab Tests

Used for:

Setting and Measuring Benchmark

Hole Diameter of Mesh Hopper:

2.5mm

The NHP200 is our flagship pellet durability tester used for calculating the Pellet Durability Index (PDI) of feed and wood pellets by simulating pellets transportation environment from mill to trough.

The NHP200 is a desktop tester suitable for laboratories and busy testing environments, designed to provide a quality benchmark that can be used to monitor the standard of output and optimise a mills production.

A minimal amount of human input ensures consistent and reliable results, as well as allowing more time for the operator to complete other tasks.

Fitted with a 2.5mm diameter perforated hopper, the NHP200 is ideal for testing pellets with a diameter of 3-12mm.

Average test time of only 4 minutes!



Results are recorded and displayed on an LCD screen and can be printed or sent digitally to a computer.

Manually sieving and weighing pellets can be







www.tekpro.com Email: info@tekpro.com Tel: +44 (0) 1692 403403 Fax: +44 (0) 1692 404955 TekPro Ltd - Willow Park - North Walsham - Norfolk - NR28 0BD - UK




NHP200 H⁽



The Holmen Test

The Holmen Pellet Durability Test is a form of testing that is recognised worldwide. Four models are available in the range, providing a solution for any mill or facility.

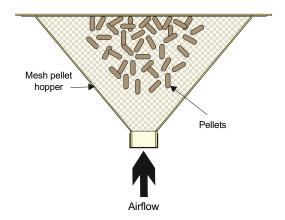

- Pellets are placed into a perforated mesh hopper
- Air is blown into the bottom of the hopper at 70mBar, cascading the pellets into the air
- ◆ Pellets collide with each other and the sides of the hopper
- Fines filter through the hopper to a chamber below where they can be removed

Holmen Range

NHP100



Portable / Manual Feed Pellets

NHP200



Desktop / Automatic Feed & Wood Pellets

NHP300



In-line / Automatic
Feed & Wood Pellets

Ligno Tester



Portable / Manual Wood Pellets

NHP200 Test Method

- ◆ Operator tips pellets into the machine
- Operator inputs pellet size and batch number on touchscreen
- NHP200 removes fines, weighs pellets, tests pellets, reweighs pellets and calculates PDI.
- Pellets and fines are discharged into a container
- ◆ PDI results are show on the LCD screen
- ◆ PDI results are printed or sent to a computer (optional)





Standard NHP200 Includes:

• NHP200

Pressure Gauge Calibration Certificate

Power Cable

User Manual

• Sample Cup

Size:

Depth: 400mm Width: 720mm Height: 700mm

Weight: 50kg

Distributed Worldwide

110V-115V & 220V-240V, 50 & 60Hz available

www.tekpro.com

Email: info@tekpro.com Tel: +44 (0) 1692 403403 Fax: +44 (0) 1692 404955 TekPro Ltd - Willow Park - North Walsham - Norfolk - NR28 0BD - UK